

Lamp Replacement for the Orbital X

NOTICE: Disconnect the electrical power from the unit before replacing lamps.

1. Standing in front of the unit, remove the 2 screws from under the front lip located at the edge of the washout section. Then remove the 4 screws from the vacuum drawer panel (drawer handle will need to be removed).
2. Locate the black knob on the rear of the unit and completely unscrew it.
3. From the front, pull the drawer towards you for access to the lamp and ballast section. Lamps are located on the underside of the drawer.
4. Replace/change the lamps and reverse the above procedure.

Note:

If using shield lamps, make sure the shield faces away from the exposure/vacuum plate.

For removal of the Post and/or Detack lamps, remove 5 screws from the front panel above the Post/Detack drawer. Pull the drawer forward towards you.

The lamps will be accessible from the underside of the drawer. Replace the lamps and reattach the front panel.